


VEC PRIMARY POLE

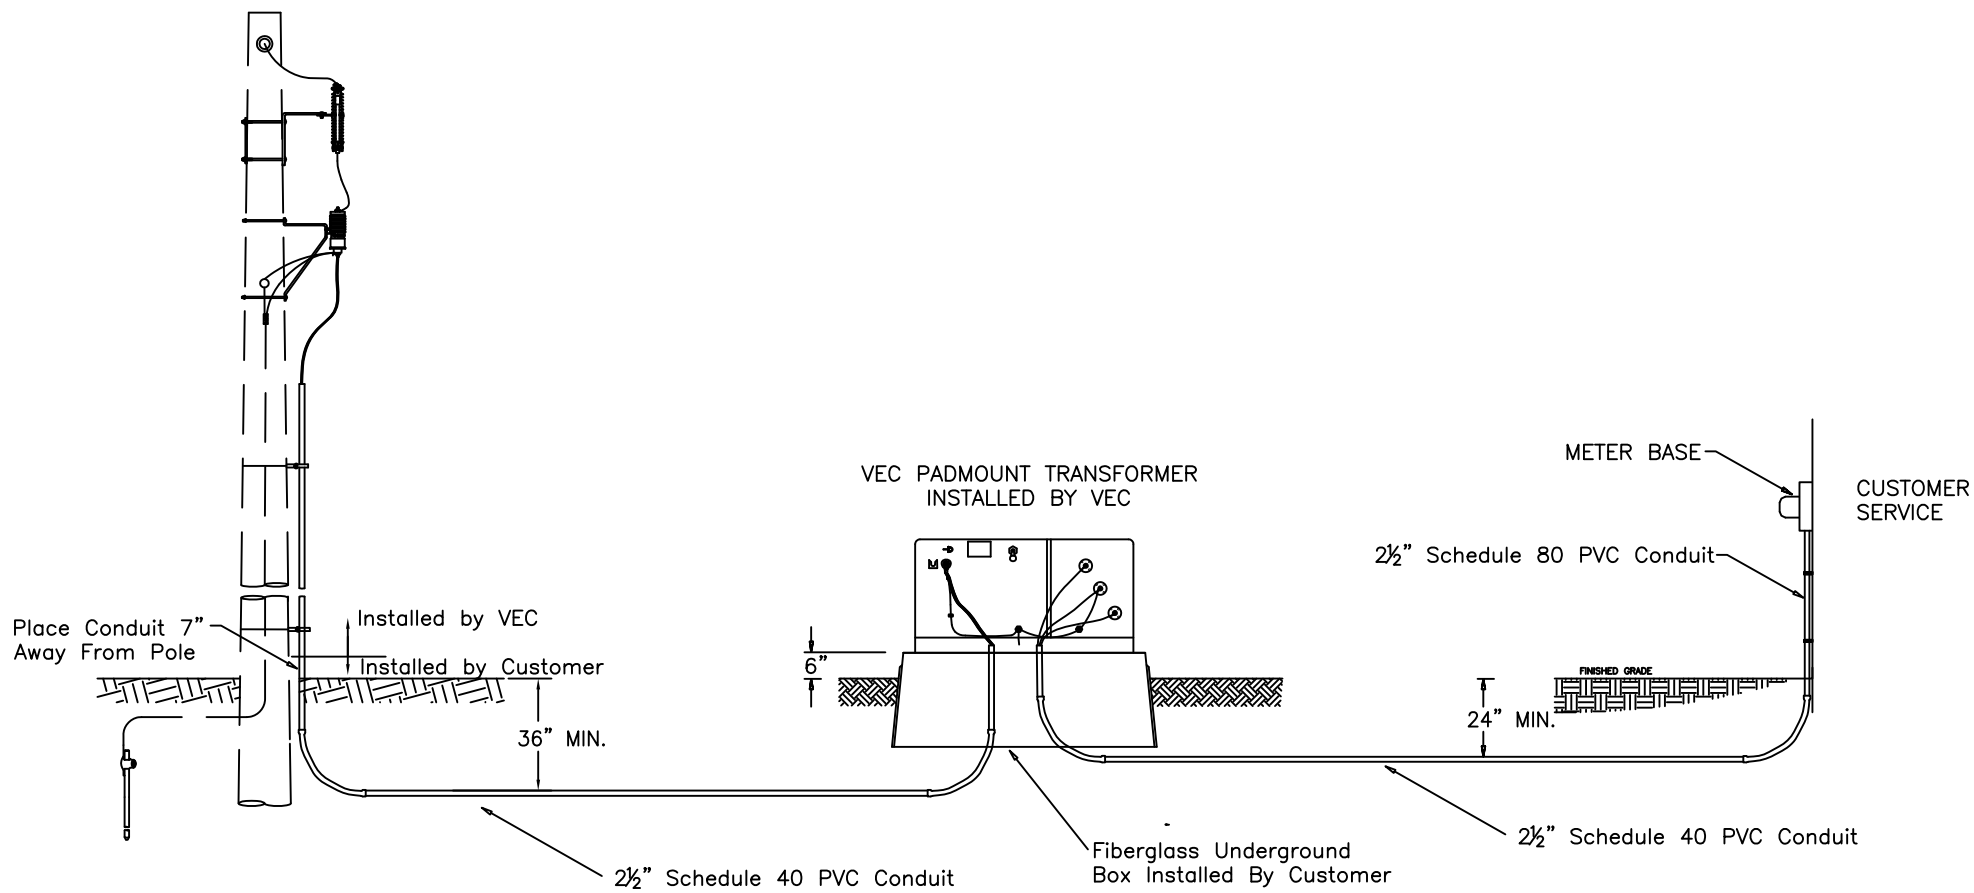

All Elbows to be Schedule 80 Long Sweep (36")

NOTES:

1. Customer responsibilities:
  - ◆ Digging all trenches
  - ◆ Installing conduit
  - ◆ Installing necessary underground boxes furnished by VEC
2. Top of underground boxes should extend above the finished grade 6" to 8".
3. Top of underground boxes must be level.
4. Back fill around underground boxes must be thoroughly compacted.
5. Bottom of underground boxes must be fully supported on compacted, level earth.
6. Do not back fill with rocks or debris.
7. VEC representative must inspect work before back filling can begin.
8. Marking tape (furnished by VEC) should be placed 12" above top of conduit.
9. 3" conduit may be required for 400 Amp service as directed by VEC Engineer.



Installation Guidelines  
Underground Service with  
Underground Transformer

Revised  
08/18/14

Drawn By  
CKD